

Work Order ID 132851

Tuesday, May 12, 2015 11:22:26 AM

132851

Page 1

Item ID: D3272-1 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Step
 Start Date: 5/12/2015 Start Qty: 2.00 ***2*** Cust Item ID:
 Required Date: 5/12/2015 Req'd Qty: 2.00 ***2*** Customer:
 Reference:

Approvals: Process Plan: MLJ Date: MAY 12 2015 Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
D3272	Rev B

100 Large Fab 0.00
100
 Large Fab 0.01
 Large Fab
Memo
 SQUARE ONE END BEFORE CUTTING OTHER END
 1-Cut D2622-120 extrusion to 116.25" long as per Dwg D3272 using cutting table setup DT 8185-2A
 2-Drill extrusion as per Dwg D3272 using Jig DT8680 for rivets.
 3-Debur

(2) 15-5-12

110 QC6- Inspect dimensions to drawing 0.00
110
 QC **Memo** 0.00
 Quality Control

(2) 2B 15-05-12

Work Order ID 132851

Tuesday, May 12, 2015 11:22:26 AM

132851

Page 2

Item ID: D3272-1

Accept

N900040100Setup Start ***NS1***

Revision ID:

Item Name: Step

Stop ***NS2***

Start Date: 5/12/2015 Start Qty: 2.00

2

Cust Item ID:

Required Date: 5/12/2015 Req'd Qty: 2.00

2

Customer:

Reference:

Approvals:

Process Plan: _____

Date: _____

Tooling: _____

Date: _____

Run Start ***NR1***

QC: _____

Date: _____

SPC (Y/N): _____

Date: _____

Stop ***NR2***Sequence ID/
Work Center IDOperation
DescriptionSet Up/
Run Hours

Tool ID

Tool #

Plan
CodeAccept
QtyReject
QtyReject
NumberInsp.
Stamp

120

Identify as per dwg & Stock Location:

0.00

120


Packaging

Memo

0.00

Packaging

LOCATION: WA003

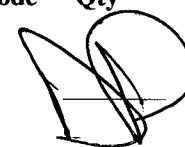

15-5-12

130

QC21- Final Inspection - Work Order Release

0.00

130

QC

Memo

0.00

Quality Control

MLJ

MAY 13 2015

ME
15-5-12

Picklist Print

Tuesday, May 12, 2015 11:22:29 AM

Page 1

Work Order ID: 132851

132851

Parent Item: D3272-1

D3272-1

Parent Item Name: Step

Start Date: 5/12/2015

Required Date: 5/12/2015

Start Qty: 2.00

Required Qty: 2.00

Comments: IPP Rev:A New Issue 07-06-09 JLM

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D2622-120C

Manufactured

No

100

Each

128.9200

1

2

D2622-120C

Step Extrusion

Location

Loc Qty

Loc Code

WA003

128.92

125381

3.92

130161

125

15-5-12

2



DESIGN <i>GP</i>	DRAWN BY <i>[Signature]</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>LE</i>	APPROVED <i>[Signature]</i>	DRAWING NO. D3272	REV. B SHEET 1 OF 3
DATE 07.05.18		TITLE STEP ASSEMBLY, HI LONG	SCALE NTS
A	04.03.01	NEW ISSUE	
B	07.05.18	D3272-1 WAS D2622-120	

RELEASED

07.06.04 *[Signature]*



QTY -041	QTY -042	PART NUMBER	DESCRIPTION
X		D3272-041	STEP ASSEMBLY, HIGH LONG (LH)
	X	D3272-042	STEP ASSEMBLY, HIGH LONG (RH)
1	1	D3065-041	LEG ASSEMBLY
2	2	D3066-1	SPACER
2	2	D3067-1	END PLATE
2	2	D3219-1	SUPPORT
1	1	D3272-1	STEP
16	16	MS20600AD4W4	RIVET

GENERAL NOTES:

- 1) D3272-041 SHOWN. FOR D3272-042, INSTALL D3219-1 SUPPORT OPPOSITE SIDE
- 2) WELD PER DART QSI 004
- 3) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005.4.1
POWDER COAT ASSEMBLY WHITE (4.3.5.1) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT PER DART QSI 005 4.4
- 4) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.
- 5) ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.
- 6) BREAK ALL SHARP EDGES 0.005 TO 0.010 MAX.

15-05-04
NO. 132851 MLS
WORK ORDER
WITHOUT NOTICE
SUBJECT TO AMENDMENT
ENGINEERING
RETURN TO
SHOP COPY


Copyright © 2004 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.


DART

DESIGN	99	DRAWN BY		DART AEROSPACE LTD
CHECKED	CE	APPROVED		HAWKESBURY, ONTARIO, CANADA
DATE	07.05.18	DRAWING NO.	D3272	REV. B
		TITLE	STEP ASSEMBLY, HI LONG	SHEET 2 OF 3
		SCALE	1:20	

RELEASED
07.06.04

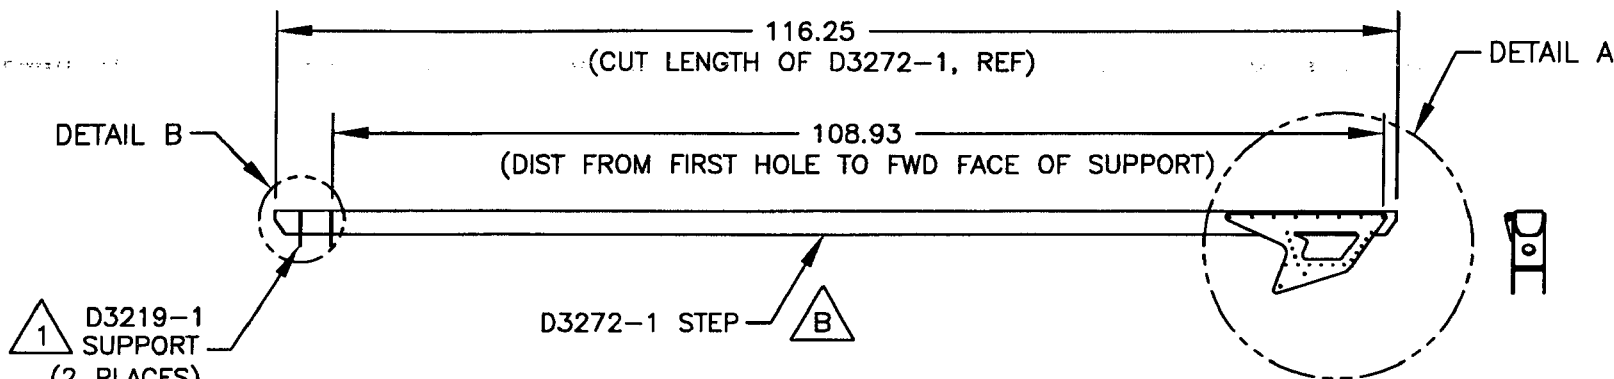

D3272-041 STEP ASSEMBLY (LH. SHOWN)
D3272-042 STEP ASSEMBLY (RH, OPPOSITE)

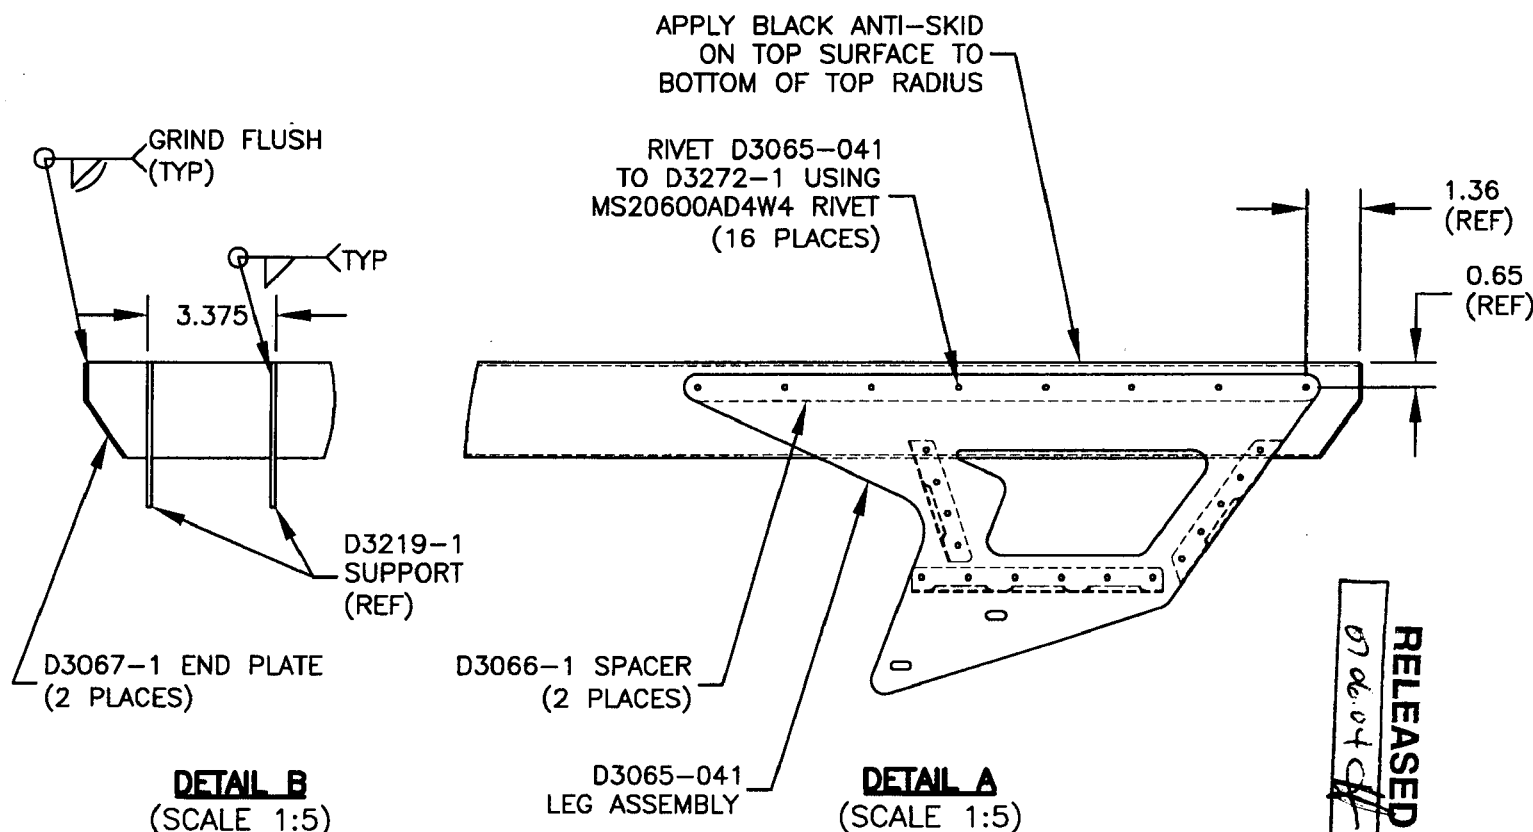




DESIGN <i>qp</i>	DRAWN BY <i>[Signature]</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>LE</i>	APPROVED <i>[Signature]</i>	DRAWING NO. D3272	REV. B SHEET 3 OF 3
DATE 07.05.18	TITLE STEP ASSEMBLY, HI LONG		SCALE 1:20


RELEASED

07.06.04 *[Signature]*

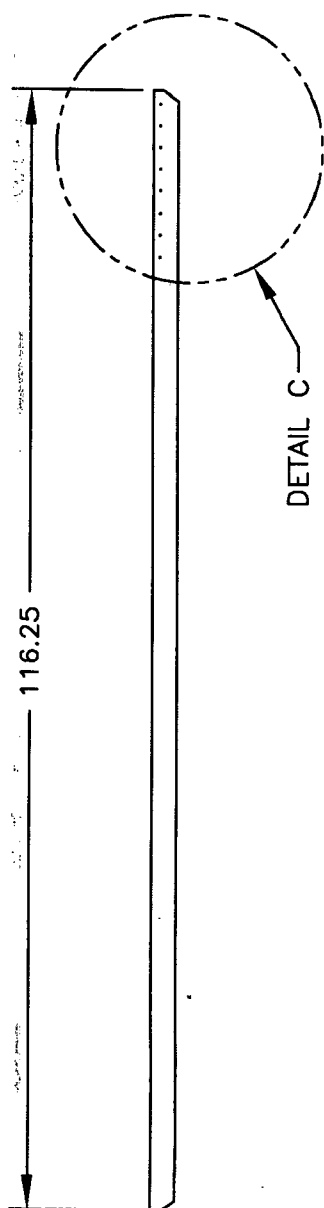

B D3272-1 STEP

(MAKE FROM D2622-120 STEP EXTRUSION)

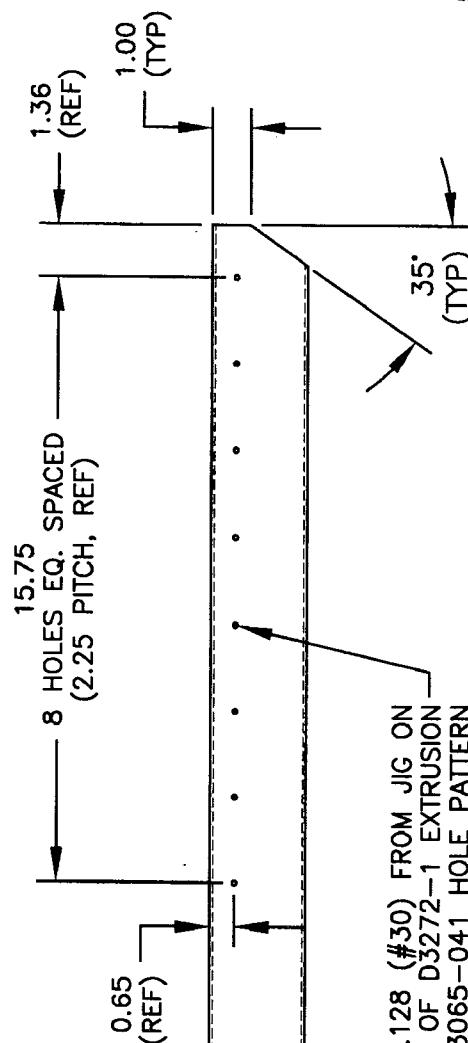

DRILL $\phi 0.128$ (#30) FROM JIG ON BOTH SIDES OF D3272-1 EXTRUSION TO MATCH D3065-041 HOLE PATTERN

DETAIL C
(SCALE 1:5)

Copyright © 2004 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.